



INDEX NO.	DESCRIPTION	PART NO.	REQ'D NO.
39	Fitting	229891	1
40	Fitting	229892	1
41	Hydraulic Hose	229893	1
42	Fitting	229894	1
43	Pressure Pipe	229896	1
44	Oil Valve Complete	255893	1
45	Overload Spring	255525	1
*46	O-ring	255523	1
*47	Fill Screw	255015	1
48	Retainer	229766	1
*49	Checkball, .156 Diameter	9021	1
50	Spring Guide	255116	1
51	Spring	255115	1
52	Release Shaft	255114	1
*53	Gasket	255113	1
54	Release Guide Bushing	255112	1
*55	Release Oil Seal	255111	1
56	Retaining Ring	255120	2
57	Connecting Strap	255141	2
58	Overload Cover Screw	255524	1
59	Pump Bearing	255143	1
*60	O-ring	255142	2
61	Rivet Pin	255144	2
62	Valve	9004	1
63	Hydraulic Block Assembly	229625	1
64	Pump Piston	255139	1
*65	Pump Piston "U" Cup	255136	1
66	Washer	255137	1
67	Retaining Ring	255138	1
68	Lock Nut	255167	2
69	Bolt	255166	2
70	Pin	229897	1
*71	Checkball, .312 Diameter	9005	2
72	Spring	229898	2
*73	Copper Washer	255018	2
74	Cover Screw (Intake)	229899	1
75	Cover Screw (Discharge) REPAIR KIT	229864 229900	1

INDEX NO.	DESCRIPTION	PART NO.	REQ'D NO.
1	Handle Grip	251113	2
2	Handle	255626	1
3	Dust Shield	255804	1
4	Retaining Ring	255135	2
5	Handle Base Shaft	229697	1
6	Handle Base	229762	1
7	Handle Base Screw	255122	1
8	Cotter Pin	229763	1
9	Fastener	229764	1
10	Release Arm	255131	1
11	Nut	255128	2
12	Release Hub	255130	1
13	Pump Pedal	229698	1
14	Extension Spring	229699	1
15	Release Layer	229866	1
16	Retaining Ring	229867	2
17	Rear Wheel	229868	2
18	Set Screw	229869	1
19	Cover Screw	255639	2
20	Cover	229871	1
21	Pivot Bolt	229872	2
22	Pivot Sleeve	229873	2
23	Ring	229874	1
24	Sleeve	229876	1
25	Bushing	229877	1
*26	O-ring	229878	1
*27	Backup Ring	229879	1
28	Plug	229881	1
29	Shut-off Valve	229882	1
*30	Backup Ring	229883	2
*31	O-ring	229884	2
32	Washer	229767	1
33	Frame Assembly	229765	1
34	Cylinder Assembly	229620	1
35	Washer	229886	2
36	Front Wheel	229887	2
37	Retaining Ring	229888	2
38	Pressure Pipe	229889	1

*Designates those parts included in repair kit #229900